

Platypus Gen 7A Controller Quick Guide

<i>About the Platypus Controller</i>	3
<i>Platypus Controller Dimensions</i>	4-5
<i>Installing the Platypus Controller</i>	6
<i>Temperature Sensor Installation Options</i>	7-8
<i>Platypus Starter</i>	9
<i>Engine Run Times</i>	10

Platypus Fire Pty Ltd
makers of the



PLATYPUS[®]
CONTROLLER

and



PLATYPUS[®]
SPRINKLER

The Sensible Bushfire Protection System

Platypus Fire Pty Ltd makers of the



*The Sensible Bushfire
Protection System*

About the Platypus Controller

The Platypus Controller measures ambient air temperature to automatically activate compatible equipment that supplies water to the sprinkler system. The temperature that activates the system is set by the user up to a maximum of 60°C.

When the ambient air temperature rises above the set point, the system becomes active. The system will run for an amount of time which is set by the user up to a maximum of 60 minutes.

After the run time has expired, the system pauses for an amount of time, also set by the user, up to a maximum of 60 minutes. The ambient air temperature is measured again, if it is still above the set point the controller will run the system again.

This cycle is repeated until the ambient air temperature falls 5°C below the set point. During these cycles the controller will send SMS information* to the stored numbers advising the status of the system.

The EVAC Button feature allows the user to turn the system on to run for cycle times up to 1 hour when leaving the property, after the set time has expired the controller will go back into Auto Mode.

Platypus Fire Pty Ltd makers of the



The Sensible Bushfire Protection System

Automate your bushfire protection system

Key Features:

- LCD touch screen display
- Back up power from engine battery
- Run and pause cycles extend available water & fuel
- Mobile phone connectivity*
- Automatic control of diesel** and or electric pump
- Step up of speed in compatible VFD controllers
- User adjustable trigger temp & run times
- Automatic or manual operation
- EVAC button
- Maintains float charge in engine battery
- Multi user
- PIN protected access
- Low fuel sensing (on compatible fuel tanks)
- IP66 wall mount enclosure
- RCM certification
- Emergency run option
- Control of 12vdc solenoids with pulsed coil
- No annual fees, choose your own network provider
- 12 month limited warranty

Latest features included in new Gen7A controller:

- New intuitive user firmware
- Ruggedized electronics
- Improved battery charging
- LED's on PCB outputs
- Easy access phoenix connectors
- System diagnostics
- Speed control of compatible diesel engines

Options

- High gain pole mount antenna
- Additional external temp sensor
- Flow switch
- Control of two diesel engines
- Solar charge kit
- AC power adapter
- Tank float switch
- GPS antenna

* If SIM card has been installed by end user.

** Engine must have a compatible fuel stop solenoid and electrical system.



New release Gen7A Controller 2024



Phone 03 5644 3277, email info@platypussprinkler.com.au or visit www.platypussprinkler.com

*If SIM card has been installed by end user.

**Engine must have a compatible fuel stop solenoid & electrical system

Platypus Fire Pty Ltd makers of the




PLATYPUS[®] CONTROLLER

*The Sensible Bushfire
Protection System*

Platypus Controller dimensions

- back and side view

Shown with optional enclosure mounted temperature sensor and antenna.

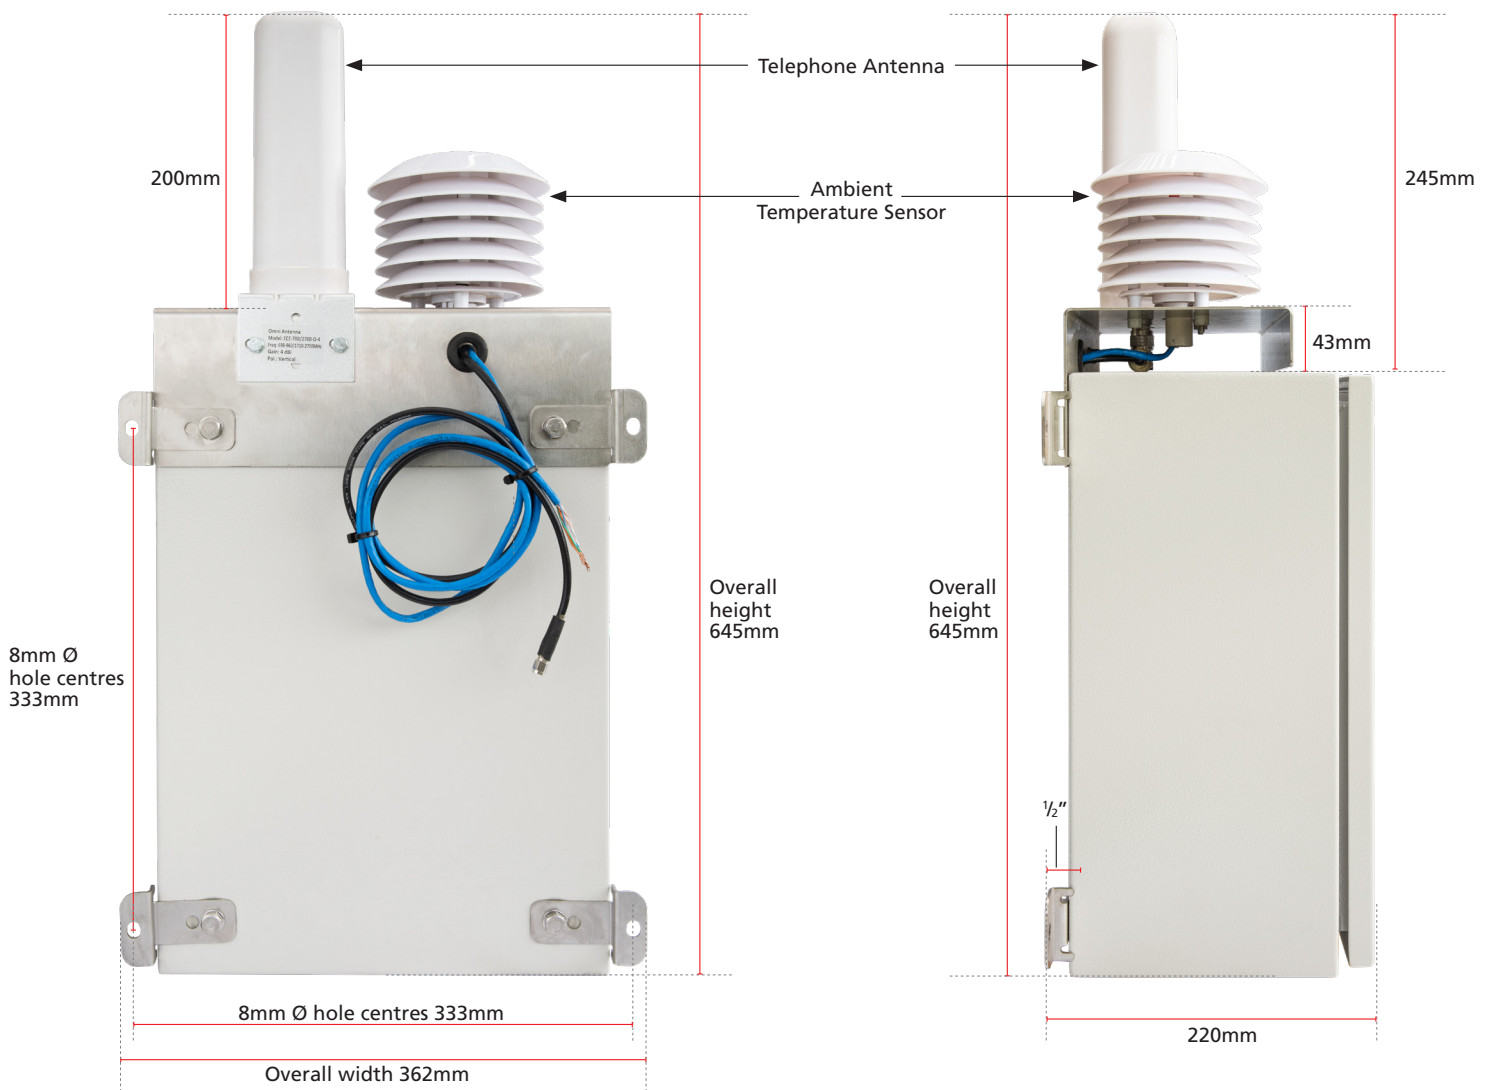

NOTE: Dimensions shown are to be used as a guide only.

Platypus Fire Pty Ltd makers of the




*The Sensible Bushfire
Protection System*

Platypus Controller dimensions - top and bottom view



- Total weight 13.2kg
- The IP rating of the enclosure is IP66
- The Platypus Controller has been tested and complies with AS/NZS 60950.1:2015, AS/CA S042.1:2015 and AS/CA S042.4:2015. Test date, 28 September, 2016

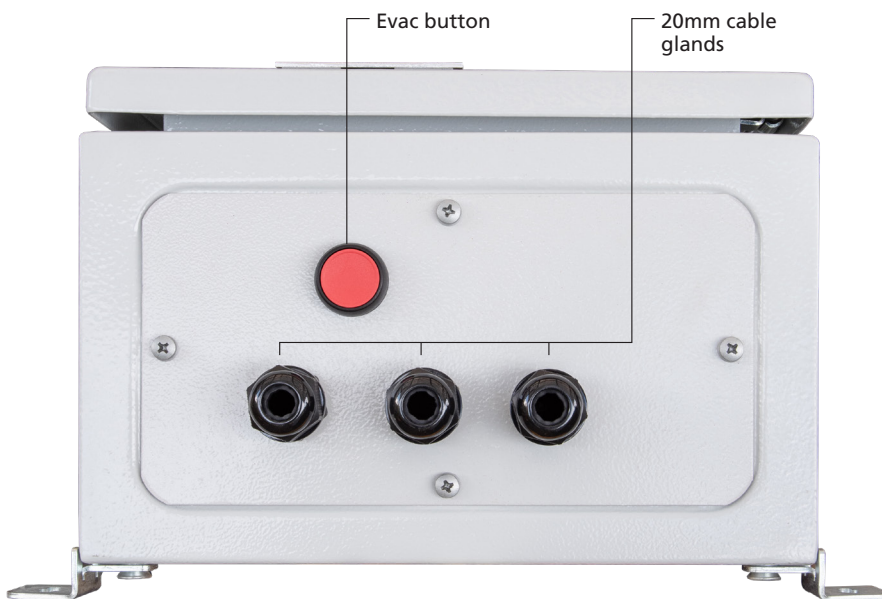



The Sensible Bushfire Protection System

Installing the Platypus Controller

Figure 1.

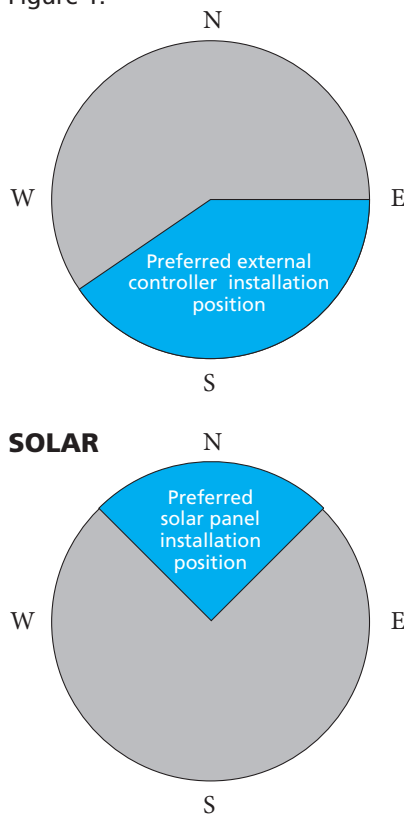


Figure 2.



Figure 1.

- When installing the Platypus Sprinkler Controller to the exterior of a building, the Platypus Sprinkler Controller should be installed on a surface that is not exposed to the sun in the later part of the day.
- The area marked in blue on the compass in Figure 1 shows the preferred location of the Platypus Sprinkler Controller.
- This is to ensure the reading from the temperature sensor mounted at the top of the Platypus Controller enclosure will not give a false indication due to radiant heat.

Remote Temperature Sensor Location:

The Remote Temperature Sensor should ideally be positioned in the path that fire is most likely to approach from.

Maximum CAT5 Cable Length 100mt.


Figure 2.

- We recommend using the Clipsal 56 series switched outlet for the Platypus Controller. The screw in style connector prevents accidental disconnection and the switch allows for locking in the "ON" position.
- Platypus Controller model PCV511-10 requires Clipsal model 56C310GY and 20amp RCD.

The Platypus Controller has been designed and certified to plug into a Clipsal ISO series outlet. For this reason the Platypus Controller should not be hard wired.



Platypus External Temperature Sensor Assembly Options

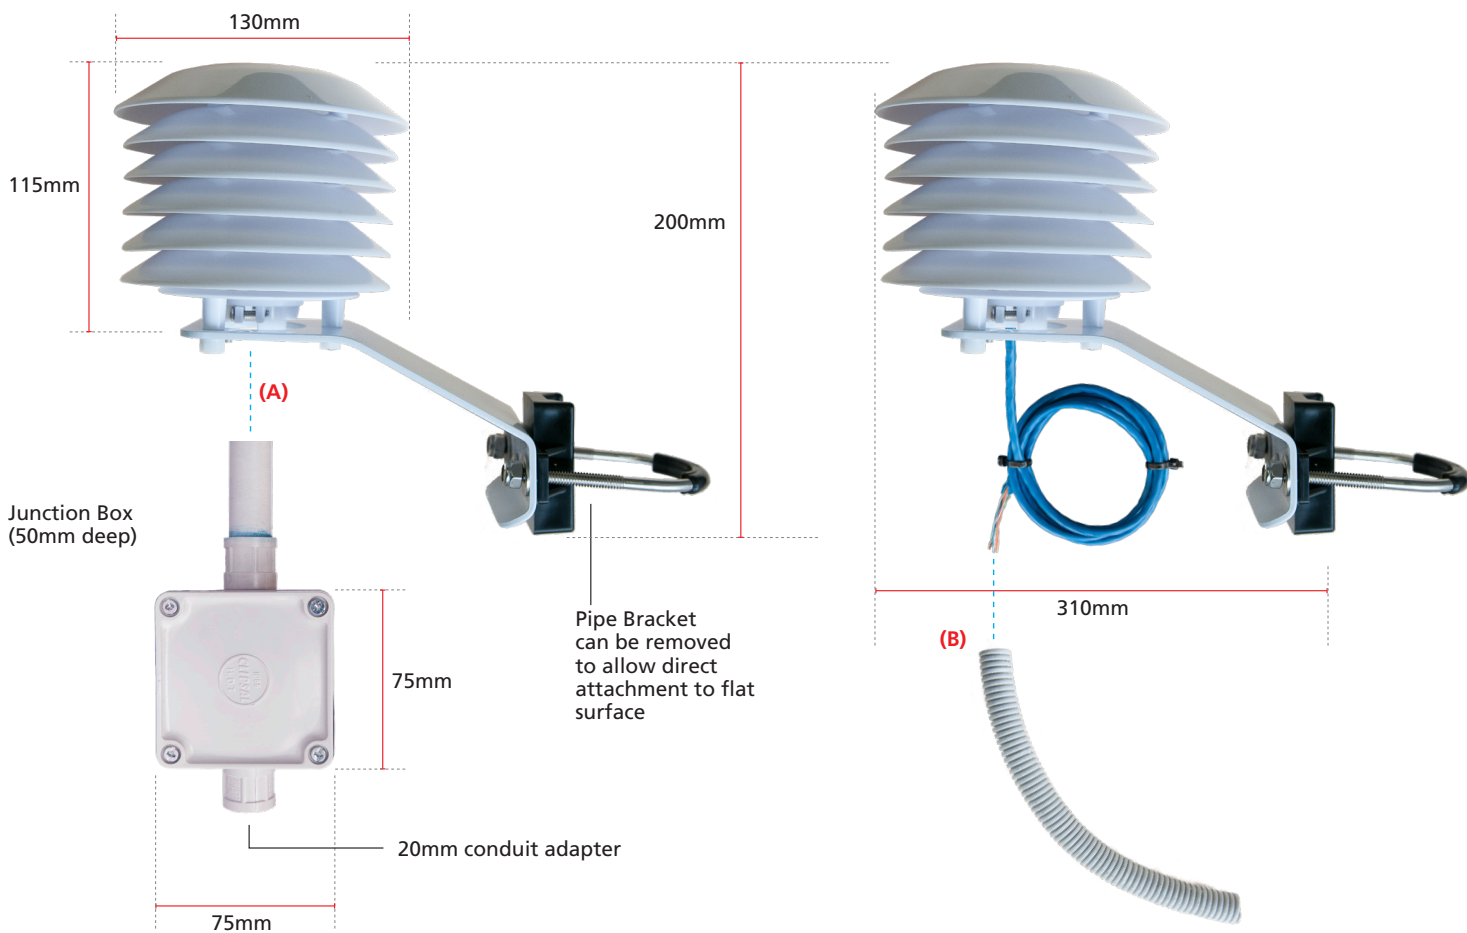

Note: Junction box can be fitted directly into bottom of sensor (A) or fixed at another point using 20mm flexible conduit (B).

External Temperature Sensor is supplied fitted with Thermistor and 1 meter of CAT5 Cable.

Maximum CAT5 Cable Length 100mt.



*The Sensible Bushfire
Protection System*

Platypus External Temperature Sensor Specifications




Platypus Fire Pty Ltd makers of the



The Sensible Bushfire Protection System

Platypus Starter engine interface kit

Suits key start / key stop engines with fuel solenoid

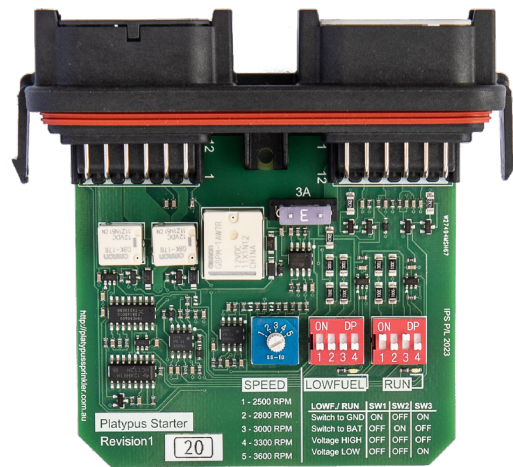

Key Features :

- Oil Pressure Switch Selection
- Low Fuel Switch Selection
- 5 Preset DC Voltage Outputs For Speed Control
- 2m Engine Harness & 10m Controller Cable

Note – Oil Pressure switch required for Run Signal



Platypus Fire Pty Ltd makers of the



*The Sensible Bushfire
Protection System*

Engine Run Times

Engine run times using Platypus Controller (Diesel engines only)

	5mins on / 10mins off	10mins on / 10mins off	10mins on / 5mins off
Yanmar L48	7.30 Hours	4.9 Hours	3.6 Hours
Yanmar L70	7.00 Hours	4.7 Hours	3.5 Hours
Yanmar L100	7.90 Hours	5.3 Hours	3.9 Hours
Kohler KD350	9.10 Hours	6.1 Hours	4.5 Hours
Hatz 1D81	9.75 Hours	6.5 Hours	4.8 Hours

Run / Pause cycle times are set by the user / installer up to a maximum of 60 minutes.